


C.3 Unloading the machine

Use the lifting methods described below to unload the various parts of the machine. Use machinery and equipment (bars, cables...) of adequate capacity and length when carrying out lifting operations. Before lifting each component, remove the fixing materials (nails, cords...) fastening them to the transport devices to prevent them from moving during the journey.

Lifting the main structure

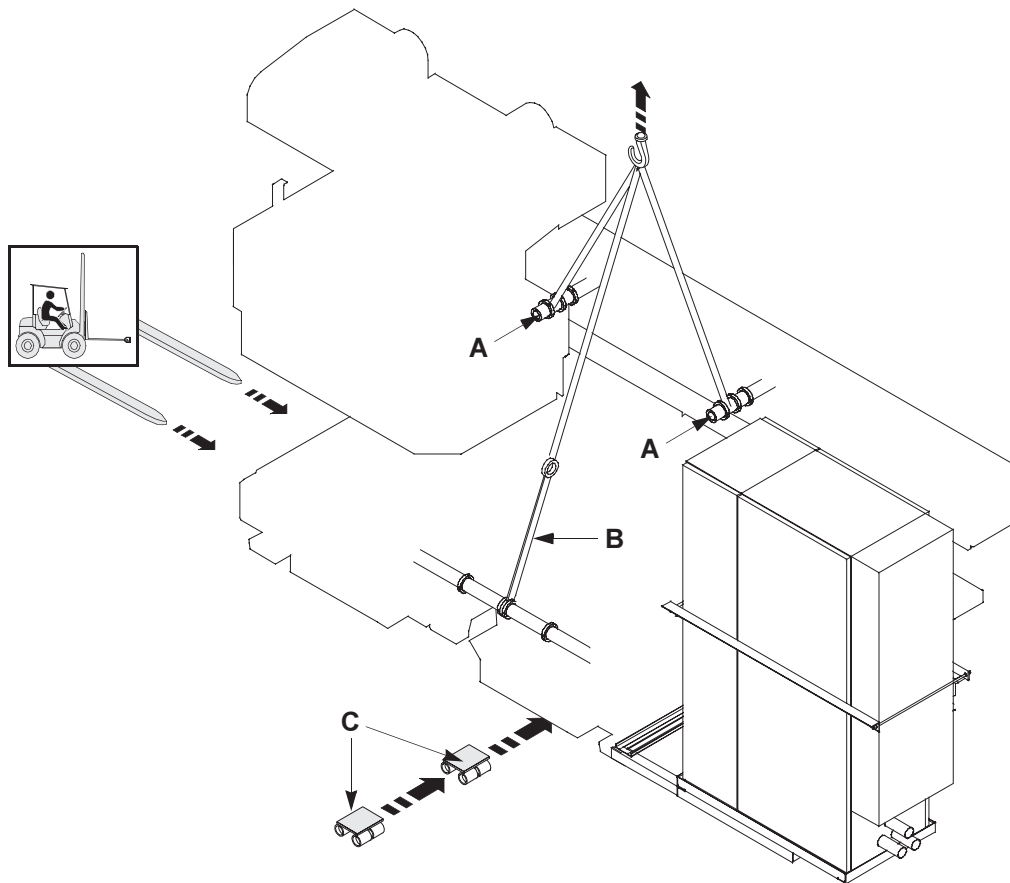

To unload the main structure, hook the lifting cables to the two round bars **A** and to bracket **B**.

To move the main structure to its final location, insert slide blocks (ref. **C**) under the base before setting the structure down on the ground.

After this, bring the fork lift truck up to the side opposite the one on which the slide blocks have been positioned, lift up the main structure in a horizontal position and manoeuvre it into place.